

Piezo Electric Gas Lighter

Catalog No. H15056-0000

The Piezoelectric Gas Lighter does not require batteries, flints, or any fuel. It operates by compressing a crystalline substance to produce an electrical spark.

Follow these steps to light a gas burner.

1. Place the end of the lighter directly in the center of gas stream that is flowing at a medium rate. Be sure that the holes located at the end of the lighter are in the gas stream as the spark is generated here.
2. With the lighter in the correct position, and the gas stream flowing at a medium rate, squeeze the activator trigger several times in rapid succession to generate a multitude of sparks in the gas stream. Remove the lighter from the stream as soon as you observe a sustained flame.
3. If the gas does not light, remove the lighter and turn-off the gas flow. With the gas flow off, squeeze the trigger to generate a spark. If no spark is observed, then the lighter should be replaced with a new lighter. If spark is observed, then wait one minute and repeat Steps 1 and 2.



SP Bel-Art

2024 Broad Street, Pocomoke, MD 21851 USA

Tel: 973-694-0500 | cservice@scientificproducts.com

belart.com

Individual use varies. SP Bel-Art assumes no obligation or liability for any advice furnished by it or for results obtained with respect to these products. All advice is given and accepted at the user's risk. For warranty information and to register your product visit scientificproducts.com.

